Autonics

COUNTER / TIMER FXS SERIES

INSTRUCTION MANUAL



Thank you for choosing our Autonics product Please read the following safety considerations before use.

Safety Considerations

%Please observe all safety considerations for safe and proper product operation to avoid hazards.

×Safety considerations are categorized as follows.

Warning Failure to follow these instructions may result in serious injury or death. ▲Caution Failure to follow these instructions may result in personal injury or product damage

*The symbols used on the product and instruction manual represent the following

A symbol represents caution due to special circumstances in which hazards may occur.

▲ Warning

- 1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)

 Failure to follow this instruction may result in fire, personal injury, or economic loss.
- 2. Install on a device panel to use.
- Failure to follow this instruction may result in electric shock or fire
- 3. Do not connect, repair, or inspect the unit while connected to a power source. Failure to follow this instruction may result in electric shock or fire.

 4. Check 'Connections' before wiring.
- Failure to follow this instruction may result in fire. 5. Do not disassemble or modify the unit.
- Failure to follow this instruction may result in electric shock or fire

▲ Caution

- When connecting the power/sensor input and relay output, use AWG 20(0.50mm²) cable or over, and tighten the terminal screw with a tightening torque of 0.74 to 0.90N·m. Failure to follow this instruction may result in fire or malfunction due to contact failure.
 Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage
- 3. Use dry cloth to clean the unit, and do not use water or organic solvent.
 Failure to follow this instruction may result in electric shock or fire.
 4. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in fire or explosion
- Keep metal chip, dust, and wire residue from flowing into the unit. Failure to follow this instruction may result in fire or product damage.


Model

| Model | Display digit | Size | Output | Power supply |
|----------|---------------|---------------|-----------------|-------------------------|
| FX4S-1P2 | 9999 | DIN W48×H48mm | 4 -4 | 24VAC 50/60Hz, 24-48VDC |
| FX4S-1P4 | (4-digit) | | 1-stage setting | 100-240VAC 50/60Hz |
| FX5S-I2 | 99999 | | Indicator | 24VAC 50/60Hz, 24-48VDC |
| FX5S-I4 | (5-digit) | | | 100-240VAC 50/60Hz |

Specifications

| Model | 1-8 | tage setting | FX4S-1P2 | FX4S-1P4 | _ | _ | |
|----------------------------------|----------|---|--|--------------------------------|---------------------------------|---------------------------|--|
| Model | Inc | icator | _ | _ | FX5S-I2 | FX5S-I4 | |
| Display digit | | 4-digit | | 5-digit | 5-digit | | |
| Characte | er size | (W×H) | 3.8×7.6mm | | 4×8mm | 4×8mm | |
| Power s | upply | | 24VAC~ 50/60Hz 24-48VDC== | , 100-240VAC~ 50/60Hz | 24VAC~ 50/60Hz 24-48VDC== | z, 100-240VAC~ 50/60Hz | |
| Permissible voltage range | | 90 to 110% of rated voltage | | | | | |
| Power consumption | | AC: Max. 3.5VA, DC: Max. 2.3W | Max. 4.6VA | AC: Max. 3VA, DC: Max. 1.8W | Max. 3.8VA | | |
| Max. counting speed of CP1/CP2 | | Selectable 1cps/30cps/2kcps/5kcps (DIP switch) | | | | | |
| Return t | ime | | Max. 500ms | | | | |
| Min. sigr | nal wid | th | INHIBIT, RESET input: approx. 20ms | | | | |
| Input method | | Selectable voltage input (PNP) method or no-voltage input (NPN) method [Voltage input (PNP) method]-input impedance: Max. 10.8kΩ, [H]: 5-30VDC=, [L]: 0-2VDC [No-voltage input (NPN) method]-short-circuit impedance: Max. 470Ω, short-circuit residual voltage: Max. 1VDC open-circuit impedance: Min. 100kΩ | | | | | |
| One-sho | ot outpu | ıt time | 0.05 to 5 sec | | | | |
| | Contac | Type | Instantaneous SP | | | | |
| Control | Contac | Capacity | 250VAC~ 3A resistive load — | | | | |
| | Solid | Type | NPN open collector: 1 | | | | |
| | state | Capacity | Max. 30VDC== 100mA | | _ | | |
| Relay | | chanical | Min. 5,000,000 operations | | | | |
| life cycle Electrical | | Min. 100,000 operations (250VAC 3A resistive load) | | | | | |
| Repeat/Set/Voltage/Temp. error | | Max. ±0.01% ±0.05 sec | | | | | |
| Insulation resistance | | Over 100MΩ (at 5 | | | | | |
| External power supply | | Max. 12VDC ±10% 50mA | | | | | |
| Memory retention | | Approx. 10 years (non-volatile memory) | | | | | |
| Dielectric strength | | 2,000VAC 50/60Hz for 1 min (between all terminals and case) | | | | | |
| Noise | | voltage | ±2kV the square wave noise (pulse width 1μs) by noise simulator | | | | |
| immunity | y AC | /DC voltage | ±500V the square wave noise (pulse width 1μs) by noise simulator | | | | |
| Vibration | | chanical | 0.75mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 1 hour | | | | |
| | | lfunction | 0.5mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 minutes | | | | |
| Shock | Me | chanical | 300m/s ² (approx. 30G) in each X, Y, Z direction for 3 times | | | | |
| | | Ifunction | | 10G) in each X, Y | h X, Y, Z direction for 3 times | | |
| Environ- | - An | bient temp. | -10 to 55°C, storage: -25 to 65°C | | | | |
| ment | An | bient humi. | | | | | |
| Protection structure | | IP20 (front part, IEC standard) | | | | | |
| Approval Weight ^{*1} | | C € c № us Approx. 171g (approx. 110g) Approx. 156g (approx. 95g) | | | | | |
| | | | | | Approx. 156g (ap | | |

*Environment resistance is rated at no freezing or condensation. Dimensions (unit: mm) □48 81.2 :#.#:#.#: Bracket Panel cut-out Min. 65 60.27 45 0 0 49.5

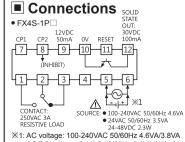

• FX5S-I□ 12VDC CP1 CP2 50mA OV RESET 7 8 9 10 11 12 ∳ (INHIBIT) ₩1


AC/DC voltage: 24VAC 50/60Hz 3.5VA/3VA, 24-48VDC 2.3W/1.8W XINHIBIT: In case of timer mode, this terminal is for time hold.

(voltage input (PNP); connect with 12VDC, non-voltage input (NPN); connect with 0VDC) **The above specifications are subject to change and some models may be discontinu without notice.


**Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

Detaching DIP Switch Cover

XTurn OFF the power before detaching the DIP switch cover.

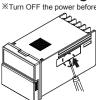

Push and pull the groove of DIP switch cover with a flat head driver to the front. The cover is detached from the case ⚠ Be sure not to be wounded when using a tool.

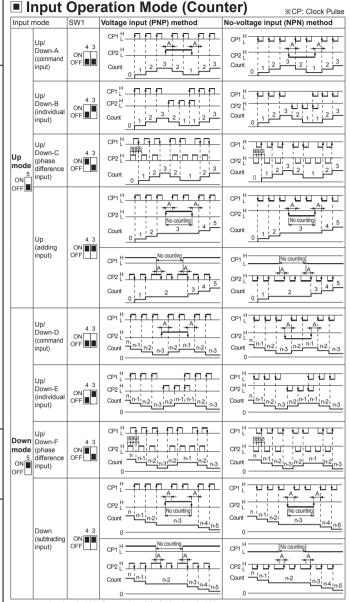

Self-holding output

Operation

ON Down mode

Output Operation Mode


Up mode

XSet one-shot output time by front TIME volume switch


■ One-shot output (0.05 to 5 sec)

Output

mode (SW2)

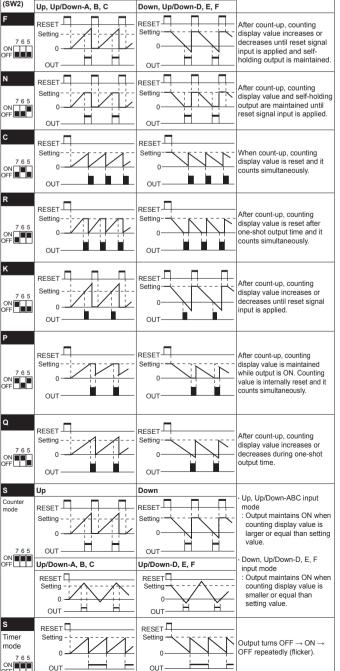




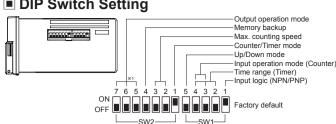


★1: Indicator model (FS5-I□) does not have no. 5, 6, 7 of SW2. for output operation mode setting


Max. counting speed

(CP1, CP2, INHIBIT, RESET input)

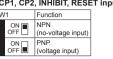


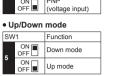



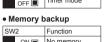




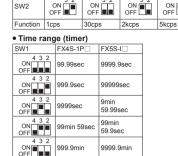


999.9hour 9999.9hour

Power OFF \rightarrow change settings \rightarrow power ON \rightarrow press RESET key or input signal (min. 20ms)


Input Connection

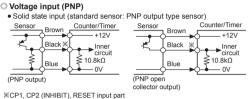

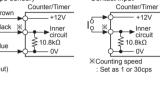

9hour 59m


O No-voltage input (NPN)

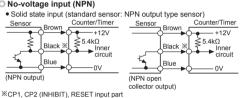



Contact input Counter/Timer 5.4kΩ Inner circuit --- ov Set as 1 or 30cps


Contact input

■ Counting & Time Operation for Indicator (FX5S-I□)

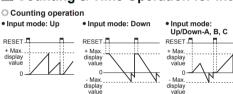


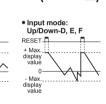

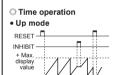

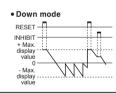

Dot for Decimal Point / Hour. Min. Second

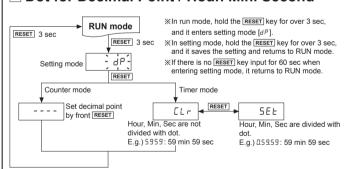

Error Display and Output Operation

| ı | Error Display | Error description | Troubleshooting | |
|---|---------------|---------------------|--|--|
| ı | ErrD | Setting value is 0. | Change the setting value anything but 0. | |
| | | | | |

※Indicator model does not have error display function. Cautions during Use

- 1. Follow instructions in 'Cautions during Use', Otherwise, It may cause unexpected accidents. 24-48VDC, 24VAC power supply should be insulated and limited voltage/current or Class 2,
- SELV power supply device. 3. Use the product, 0.1 sec after supplying power
- 4. When supplying or turning off the power, use a switch or etc. to avoid chattering. 5. Install a power switch or circuit breaker in the easily accessible place for supplying or
- 6. In case of contact input, set count speed to low speed mode (1cps or 30cps) to operate.
- If set to high speed mode (2kcps or 5kcps), counting error occurs due to chattering.

 7. Keep away from high voltage lines or power lines to prevent inductive noise.
- In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
- Do not use near the equipment which generates strong magnetic force or high frequency
- 8. This product may be used in the following environments. (1) Indoors (in the environment condition rated in 'Specifications') ②Altitude max. 2,000m ③Pollution degree 2 ④Installation category II

Major Products



Photoelectric Sensors | Temperature Controll
Fiber Optic Sensors | Temperature Controll
Fiber Optic Sensors | Temperature Controll
Fiber Optic Sensors | Temperature Fiber Controll
Door Side Sensors | Temperature Fiber Counters |
Door Side Sensors | Counters |
Area Sensors | Temperature Fiber Counter C

Pulse (Rate) Meters

Autonics Corporation http://www.autor

HEAD QUARTERS HEAD QUARTIENS, 18, Bansong-ro 513 beon-gil, Haeundae-gu, Busan, South Korea, 48002
TEL: 82-51-519-3232
[E-mail: sales@autonics.com

DRW161280AB